



# NJEX System Forward Purge




# Stop The System

- Using The Down Arrow Key on The N-300 Scroll until you see STOP in the lower left corner.
- Press Stop (Select/Enter Key)





# Close V8 at the Pipeline

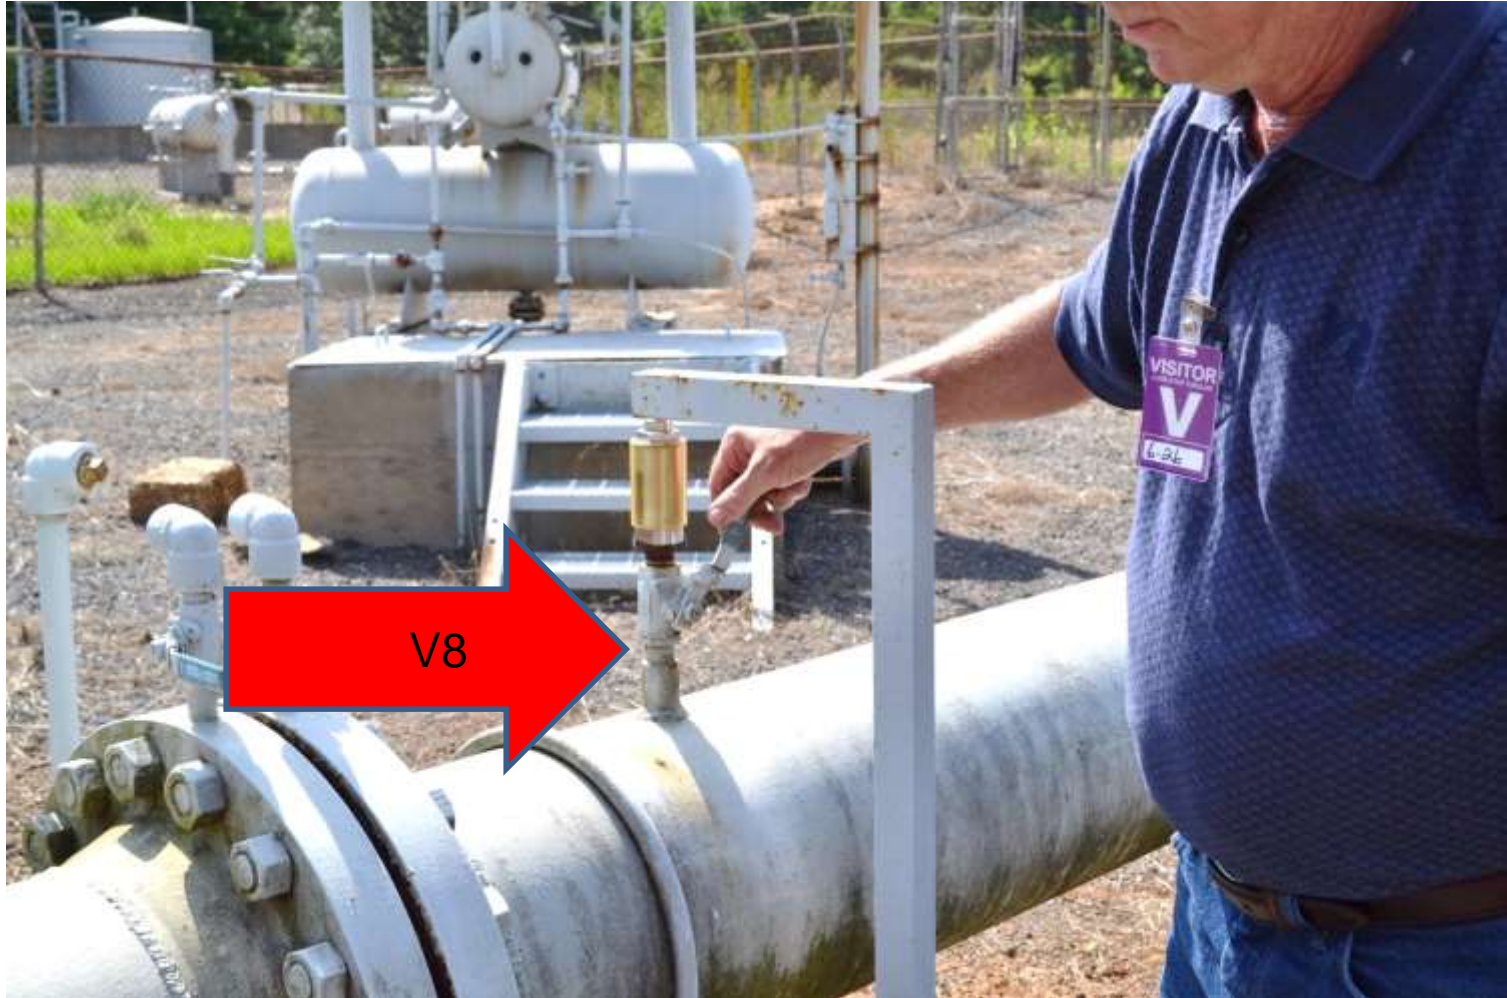



# Close V6 on the Expansion Tank





# Normal Expansion Tank Pressure (25 Psig)





# Open V4 to Raise Expansion Tank Pressure to 50-55 psig





# Elevated Expansion Tank Pressure





# Observe Meter Level on Display






## Open V2






# Observe Meter Level on Display Until Empty

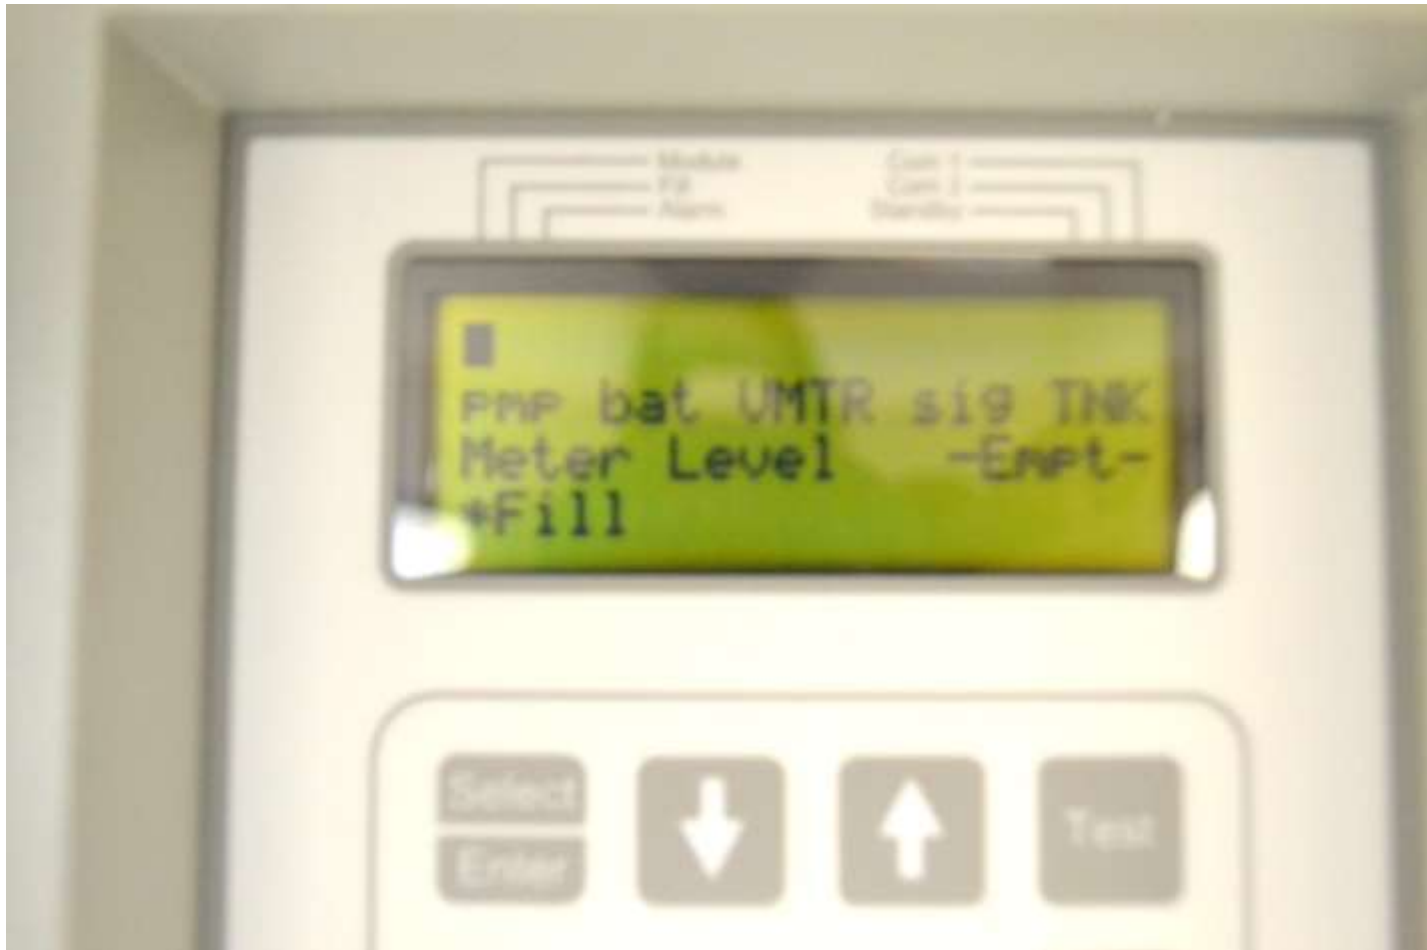




Bulk Odorant Storage Pressure Gauge will Begin Fluctuating When The Verometer (Meter Level) is Empty.

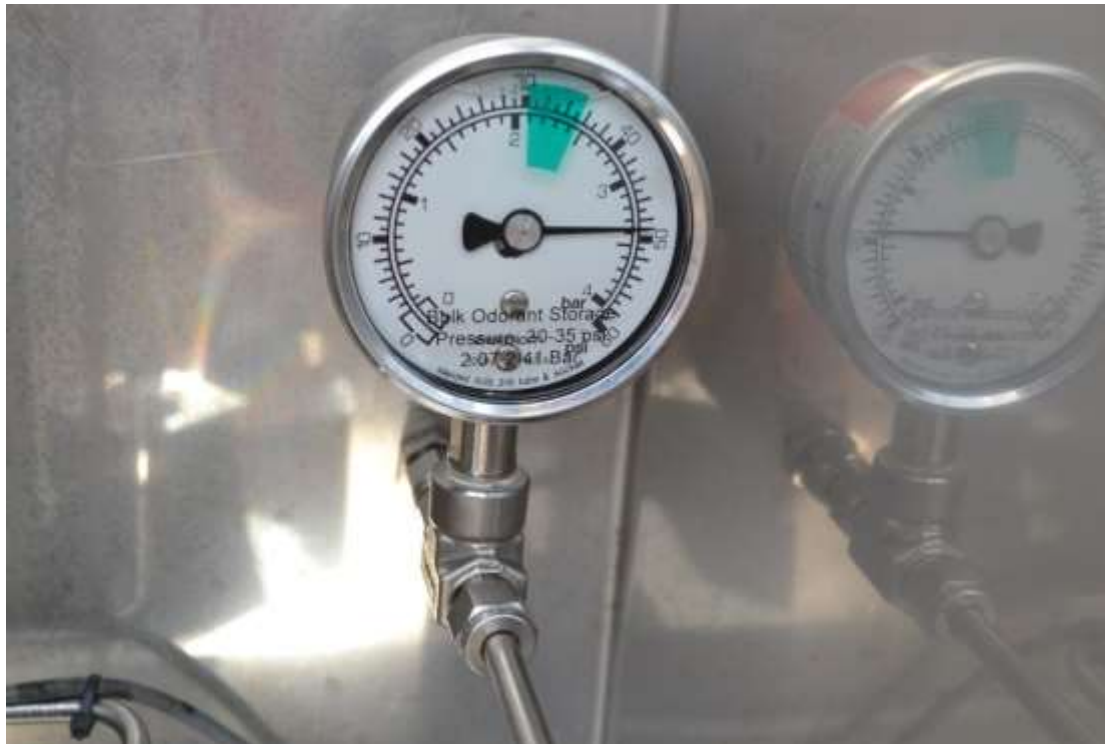



Close Odorant Supply V15 on the Bulk Tank or V17 if equipped (std. in Poly-Fiber Enclosure).

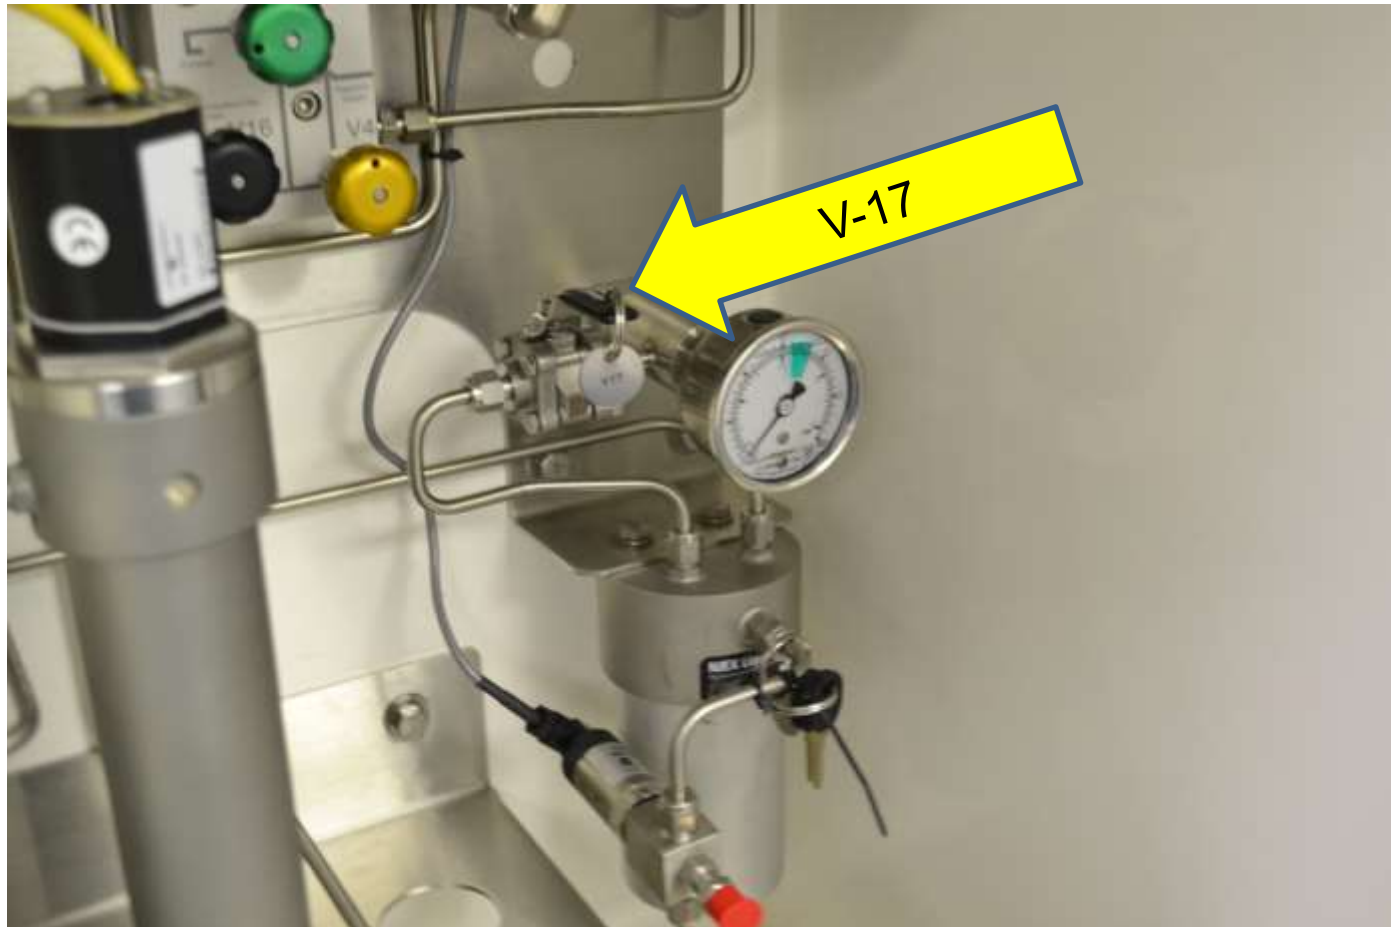



# Vent Expansion Tank to Zero PSI.

- Best Practice...Connect Flare to V5 Vent





Locate the Flare in a Safe Area,  
Open V5 and Ignite The Flare Until  
The Expansion Tank Pressure  
reaches Zero PSIG





# V2, V3 & V5 Should Be Open During Service Procedures

- Proceed to Specific Service/Maintenance Procedure