



Battery Maintenance

Should be done EVERY 2 Years



Battery Box Located Outside on S.S. Enclosure and Inside Enclosure Poly Fiber





Note Indicator Light Location





Power Off The N-300 w/Toggle Switch





Remove the Four Screws That Hold The Cover on.





Disconnect The Battery Cable From The Charger Module





Inspect All Connections for Corrosion and Good Connections





If Any Corrosion is Found, All Corroded Components Must Be Replaced







Remove all (8) Screws that Secure
the Batteries in the Enclosure





Remove Both Sets of Cells Together










Prepare new Components, Attach Cable Assy. To Battery Terminals (red +, black -)


Battery to
Charger
Module
Cable P/N
G2-0030

Battery P/N E3-1006
Includes Fusible Link

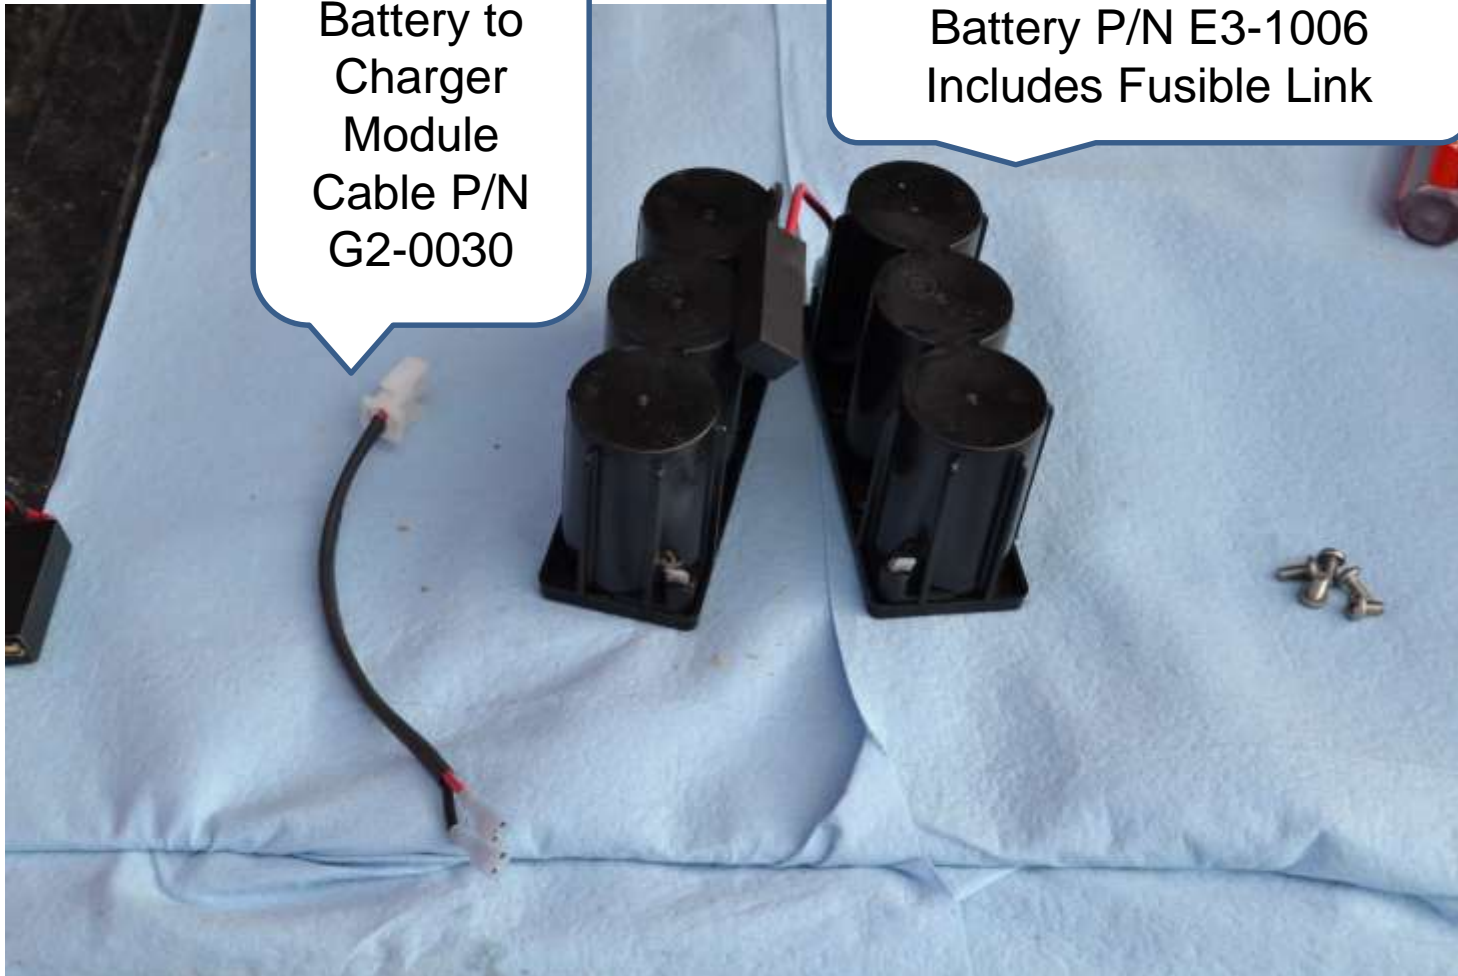



Place Battery Assembly Into The Battery Enclosure

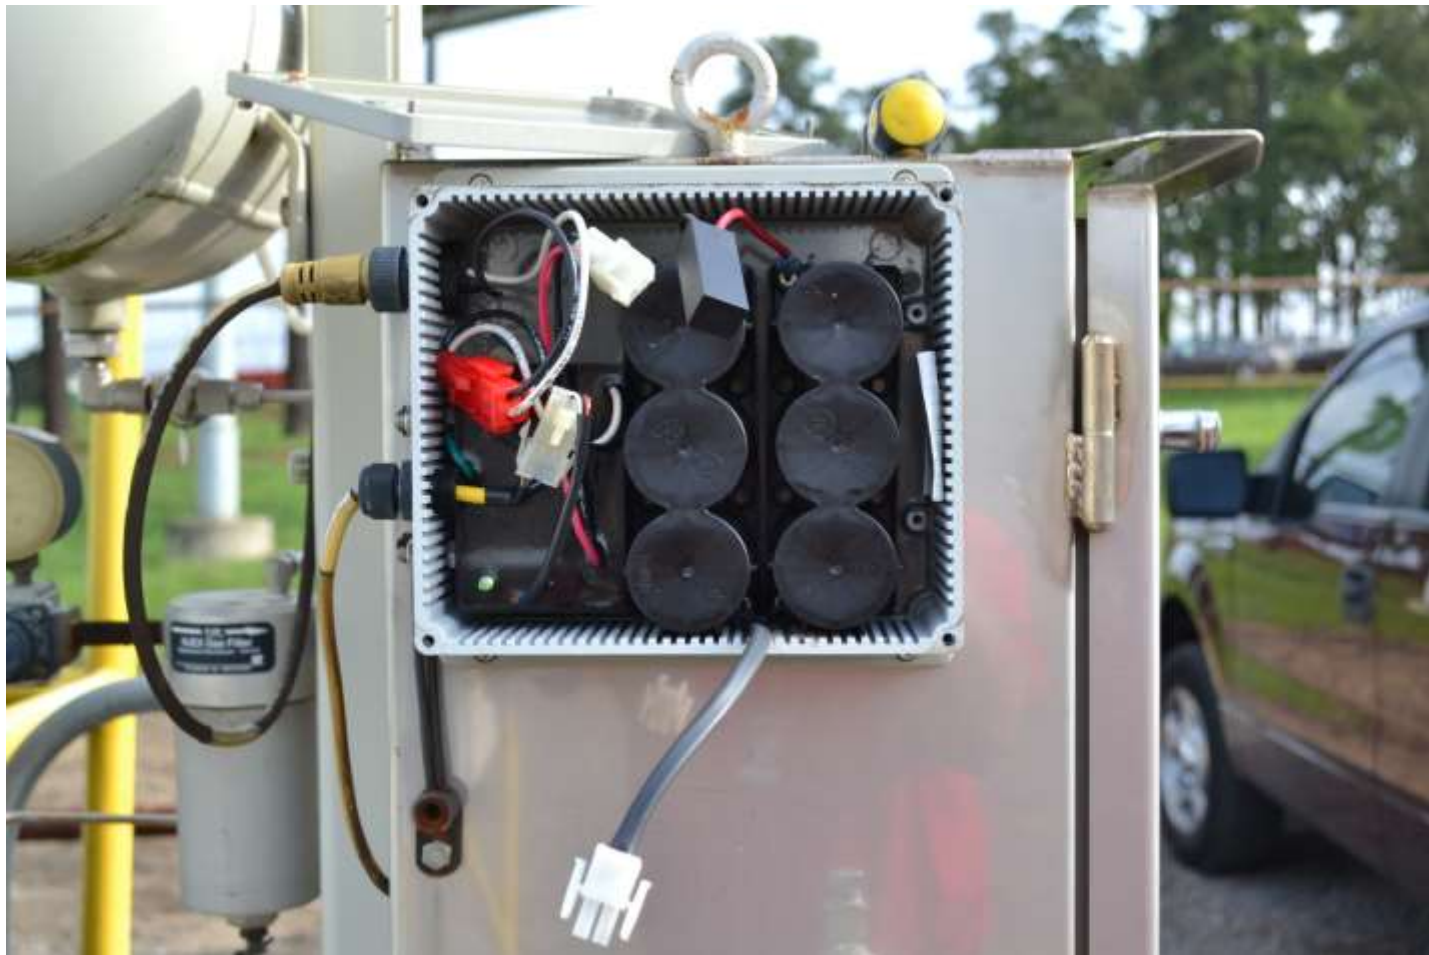



Reinstall ALL (8) Screws That Secure The Battery





The Battery Fusible Link Must Be Connected to The Battery Terminals on One Side of The Battery





Connect the Battery Charger Module to The Battery Cable attached to The Other Side of the Battery





Push The Battery Fusible Link
Connected to The Battery into the Void
Around The Battery Cells





Re-Install Battery Cover Making Sure the Charge Indicator Lens is Aligned with the Indicator Lamp.





Power On The N-300 w/Toggle Switch

