



# Solenoid Replacement



# Stop or Place The N-300 in Stand-By Mode





# Close Valve V16





# Disconnect Solenoid Vent Hoses by Pushing in on Fitting Release Ring & Pull Hose Out



## Hoses Disconnected







# Remove Allen Screws (2) per Solenoid





# Remove Old Gasket Which May Stay on Manifold or Solenoid









# Remove Cable Plug Security Screw & Unplug Solenoids





## Remove Vent Fittings and Install on New Solenoids






# Reinstall Cable Plug & Security Screws



## Install Gasket

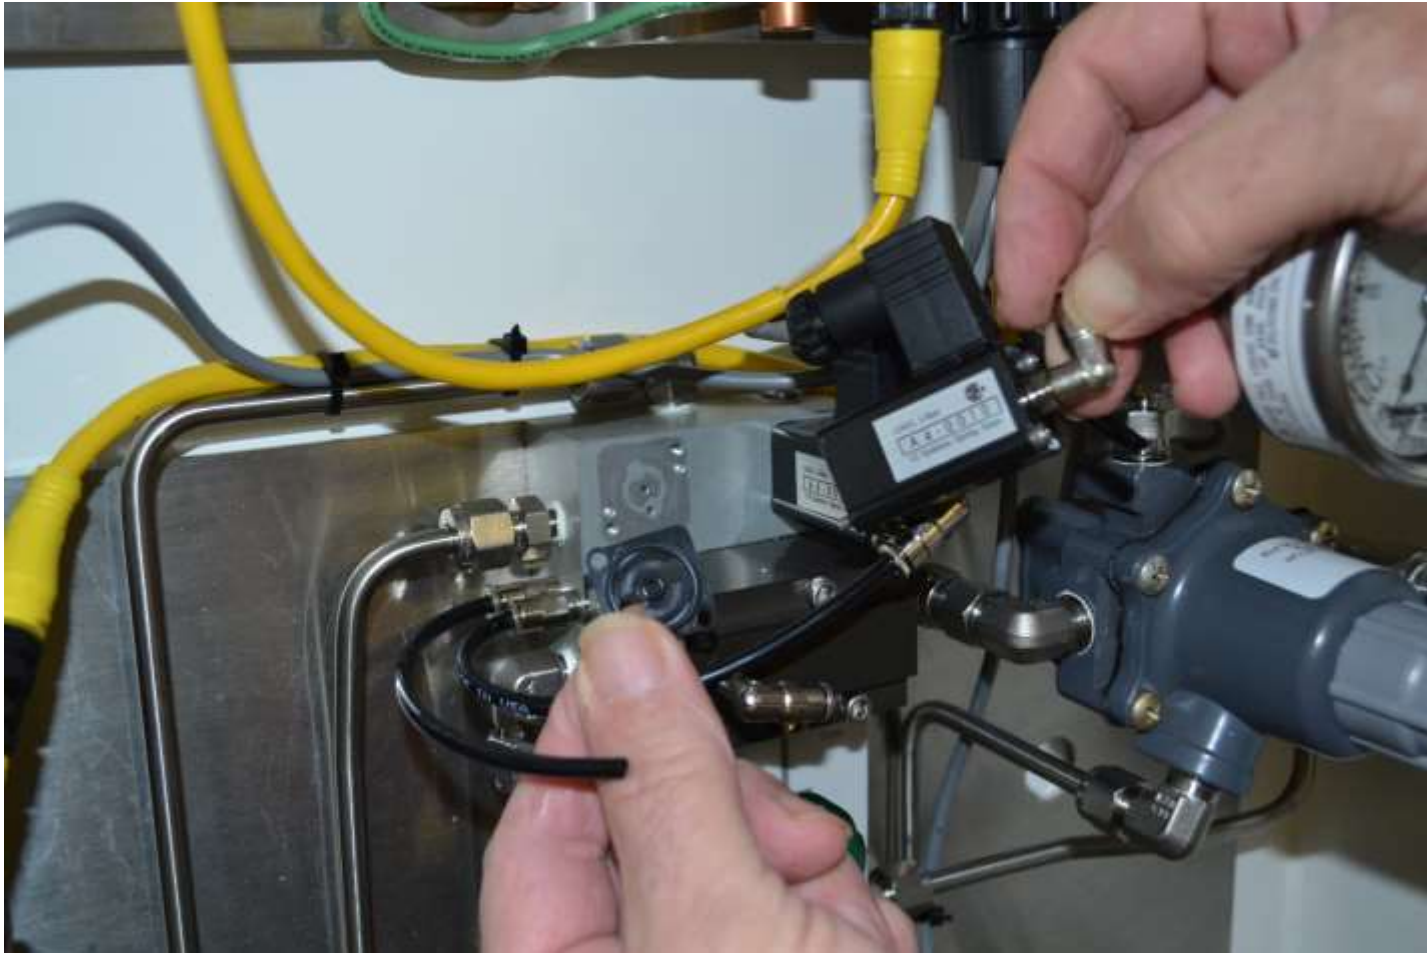





# Gasket Installed on Solenoid with Screws





# Attach Solenoid to the Manifold





# Pump Solenoid Installed on The Right Side





# Install Fill Solenoid on The Left







# Reconnect Vent Hoses by Pushing Them into Fitting





# Open V16 Fully





# Restart The NJEX System

